



Before you begin

Cyclone Media Player Quick Guide.

The following instructions are suggested for successful use of the Cyclone Media Player.

- Read User manual (On disk in PDF format)
- Remove the player from its packaging.
- If you have purchased a unit without a drive installed, install drive as recommended in the User Manual (Included disk).
- Connect the power and connect to a PC via the USB port using the cable provided.
- When the PC detects the Player, create three folders on the drive:
 - ✓ Movies
 - ✓ Pictures
 - ✓ Music

You can now drag content from your computer into the appropriate folders.

* Please note: the media player **will not** see content unless it is placed into a folder. *

- Try not to create too many folders with in folders (nested).
- Files with too many punctuation marks are unlikely to be detected by the player.
 - e.g. `family.holiday.July.[2007].GREECE.avi`
 - edit this to become:
 - ✓ `family holiday July 2007 GREECE.avi`

and the player should recognise it.